

Accessories with Bluetooth® Wireless Technology

All Kyocera Bluetooth accessories work with any mobile phone featuring Bluetooth wireless technology.



Bluetooth headset KYO110

The single-key user interface of these lightweight headsets enables easy access to mute, transfer, voice dial and call-waiting functions.



Bluetooth headset KYO310

Enjoy fashion and quality with this ultra-slim headset in a selection of premium finishes. Rotating ear bud, with an advanced in-ear speaker, fits comfortably providing a snug fit that offers excellent isolation from external noise.

Genuine Kyocera Accessories



Travel charger

This small, lightweight charger supports 100-240 VAC outlets and features surge protection and space-saving foldable blades. Premium and standard models available.



Vehicle power charger

Even if the phone battery is completely discharged, you can still make calls from the road. Premium and standard models available.



Standard battery

Enjoy more talk time between charges with Kyocera standard lithium ion (Lilon) batteries.



Wrist straps

A simple strap for convenient carrying. Available in multiple colors, styles, and materials and easily attaches to any phone's eyelet.



Find Genuine Kyocera Accessories at our Web store:

www.kyocera-wireless.com

Display Indicators

	The phone is operating in IS95 digital mode.
	The phone is operating in IS2000 (1X) digital mode.
	The phone is receiving a signal. You can make and receive calls. Fewer bars indicate a weaker signal.
	A call is in progress.
	The phone has a high-speed data connection.
	The phone is not receiving a signal. You cannot make or receive calls.
	Content is DRM protected.
	Data service is available and active on your phone.
	(blinking) The phone is sending high-speed data.
	(blinking) The phone is receiving high-speed data.
	Data service is available, but the phone is dormant.
	Bluetooth wireless technology is enabled (On).
	Bluetooth wireless technology is disabled (Off).
	The phone is roaming outside of its home service area.
	New text message.
	New voice message.
	New voice and text message.
	New photo and voice message.
	New photo and text message.
	New photo, voice and text message.
	The phone is set to light up instead of ring.
	The phone is set to vibrate or to vibrate and then ring.
	The speakerphone is turned on.
	Position location is set to your service provider and to emergency services.
	Position location is set to emergency services only.
	The phone is in camera mode.
	The phone is set to auto answer.
	The phone is in privacy mode or is accessing a secure Web site.
	The alarm clock is set.
	The battery is fully charged. The more color the greater the charge.
	The phone is in airplane mode.

Technical Specifications

Talk and Standby Times

Talk: 250 minutes

Standby: 200 hours

Screen Resolution

Main: 2.2", 240 x 320 pixels, 262K-color QVGA

External: 16 x 104 pixels, single-color OLED

Chipset

QSC6055

Banding

1xRTT, tri-band (800, 1900 MHz, AWS), S-GPS*

Size

3.5 x 2.0 x 0.7 in (89.5 x 52.0 x 16.7 mm)

Weight

3.2 ounces (90 grams)

Battery Type

790 mAh Lilon

*Depending on services available from your carrier

Product Training Website

www.kyocera-wireless.com/iteachu

Kyocera Wireless Corp.

10300 Campus Point Drive, San Diego, CA 92121
USA 1-800-349-4188, Outside USA +1-858-882-1410

CDMA Technical Support Hotline — Consumer Products

USA 1-888-236-2746, Outside USA +1-858-882-1400
phone-help@kyocera-wireless.com

Consumer Support

USA 1-800-349-4478, Outside USA +1-858-882-1401
phone-help@kyocera-wireless.com

THE NEW VALUE FRONTIER



©2008 Kyocera Wireless Corp. All rights reserved. Kyocera and The New Value Frontier Kyocera logos are registered trademarks of Kyocera Corporation. The Genuine Accessories by Kyocera logo and the KYO mark are trademarks of Kyocera Wireless Corp. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Kyocera Wireless Corp. is under license. All other marks are held by their respective owners.

Features and specifications are subject to change without notice. Not all products may be available in your area. Use only Kyocera Wireless Corp. approved accessories with Kyocera Wireless Corp. phones. Use of unauthorized accessories may be dangerous and may invalidate the phone warranty if said accessories cause damage or a defect to the phone.

Printed in USA 10/08
Part #: TMM001754-1



Neo E1100
www.kyocera-wireless.com/iteachu



Tomorrow has come to light.

Neo was created with an understanding that light is energy. And that a phone should illuminate. And captivate. Neo is a testament to that belief. Emitting light from an external lightpipe. Reflecting it from its polished exterior. An elegant phone designed with one purpose – to shine.

Memorable illuminated design with breathing lightpipe

Glowing 2.2" QVGA display

Sub-surface OLED external display

Bluetooth® wireless technology

1.3 megapixel camera with dedicated side key

Speaker-independent voice recognition

Picture caller ID

MMS, EMS and SMS*

Speakerphone

Built-in MP3 ring tones, screen savers and caller alerts

Wallpaper and ringtone shuffle

Scheduler, alarm clock, tip calculator, calculator, timer, stopwatch, memo pad, world clock

Voice memos

Built-in user guide

Predictive text-input software for rapid text entry

Vibrate alert

Micro USB connector

2.5 mm mono headset jack

BREW® 3.1.5 technology*

Wireless Application Protocol (WAP) 2.0 browser*

CDMA2000® and SGPS/E-911 capable


Supports multiple languages*

TTY/TDD support for the hearing impaired

*Depending on services available from your carrier

Keys

- | | |
|--|---|
| <p>1 Left softkey
Selects items that appear on the lower left of the display. At the home screen, you can select Menu.</p> <p>2 Navigation key
Scrolls through lists, text entry fields and accesses shortcuts from the home screen.</p> <p>3 Send key
Starts or answers a call. Press once to activate voice command, twice to display the All Calls list, and three times to redial the last number dialed.</p> <p>4 Speakerphone key
Activates the Speakerphone and answers incoming calls.</p> <p>5 * Shift key
Changes the text mode in text entry.</p> <p>6 0 Next key
Cycles through word choices during text entry.</p> <p>7 Right softkey
Selects items that appear on the lower left of the display. At the home screen, you can select Contacts.</p> | <p>8 OK key
Selects a menu item or option. At the home screen, you go to the main menu when you press the OK key.</p> <p>9 End key
Turns the phone on and off, ends a call or browser session, and returns you to the home screen.</p> <p>10 Back key
Erases characters in text entry and returns you to the previous screen when navigating through menus.</p> <p>11 # Space key
Enters a space during text entry. Press and hold to activate or deactivate Silent mode.</p> <p>12 Camera lens</p> <p>13 Volume key
Raises or lowers ringer volume.</p> <p>14 Camera key
To activate camera mode, press and hold the Camera key.</p> <p>15 External screen
Displays time, caller ID, signal, and battery strength.</p> <p>16 Lightpipe LED</p> <p>17 Micro USB charger jack</p> <p>18 Hands-free headset jack</p> |
|--|---|

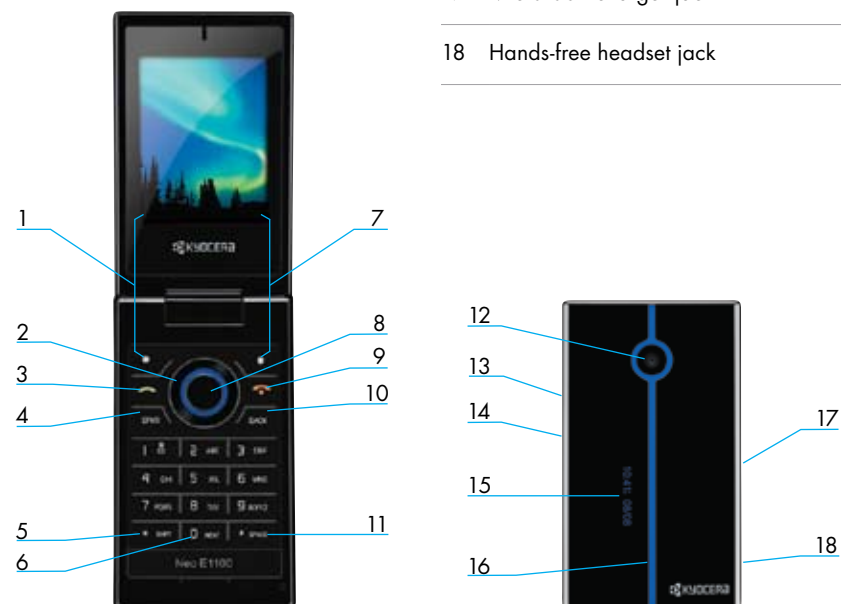

Lightpipe Behavior

Set lightpipe behavior

Select Menu > Settings > Display > Lightpipe Behavior and one of the following:

- Enable All: turns the LED display on
- Display All: turns the LED display off
- Disable while Charging: turns the LED display off when the phone is charging

Lightpipe LED Behavior

Note: The phone's lightpipe LED displays different patterns depending on the alert.

New message

One flash. If you do not respond, your phone will flash again to remind you.

Incoming call

Heartbeat pulse. It will continue until you answer the phone or miss the call.

Missed call

One flash. If you do not respond, your phone will flash again to remind you.

In call

Wave pulse. It will continue until the call ends.

Alarm

Three flashes. It will continue until you respond to the alert.

Scheduler

Three flashes. It will continue until you respond to the alert.

Bluetooth

One flash. It will continue until you respond to Bluetooth request.

Low battery

One flash. It will continue until you charge the phone.

Charging

Wave pulse. Displays when the phone is being charged.

Bluetooth Pairing

Connect to Bluetooth device

1. Select Menu > Settings > Bluetooth > On/Off > On Visible or On Invisible.
2. Prepare the Bluetooth device or accessory for pairing as described in the other devices user guide.
3. Select Menu > Settings > Bluetooth > My Devices > Find New.
4. The phone will search and detect visible Bluetooth devices in the vicinity.
5. In the device list, highlight a device and select Add. (When pairing is initiated from another Bluetooth device, you will be prompted to accept or reject the pairing.)
6. If necessary, enter the password provided in the Bluetooth device's user guide and select OK.

Connect to a device

To connect the phone to an audio Bluetooth device:

1. Select Menu > Settings > Bluetooth > My Devices.
2. At the device list, highlight a device and select Connect.

Wallpaper Shuffle

How do I enable & edit wallpaper shuffle?

To set your phone to shuffle through your Wallpapers, select Menu > Settings > Display > Wallpaper Shuffle and one of the following:

- Enable/Disable
- Edit
- View
- Set Shuffle Time

Ringer Shuffle

How do I enable & edit ringer shuffle?

To set your phone on a different ringer everytime you receive a call, select Menu > Settings > Sounds > Ringers > Ringer Shuffle and one of the following:

- Enable/Disable
- Edit
- View

Camera Operation

For camera options and setting, please reference User Guide on the phone.

Camera Options

Change camera options

While in camera mode you can select one of the following:

- Options > Settings displays the following settings you may set up prior to taking a picture:
 - Resolution adjusts the resolution.
 - Self Timer sets a self timer. When set, the camera beeps from 3 seconds down to the time the shutter snaps the picture automatically. Self Timer is not available when Multishot mode is activated.
 - Date/Time places a time stamp on the picture.
 - Multishot allows you to take up to six multiple pictures while the camera key is pressed and held. A tone will play each time a picture is taken.
 - Shutter Sound sets the sound used when the camera takes a picture.
 - White Balance adjusts for different lighting.
 - Color Tone sets the color tone of the picture.
 - Picture Quality sets the picture compression. The higher the compression, the better the detail of the picture (higher pixel rate). When set higher, the picture file size is larger, using more memory.
- Options > Brightness adjusts the brightness of the image in the home screen LCD.
- Options > Camera Pictures displays all pictures taken and stored.
- Options > Last Picture displays the most recently taken picture.
- Options > Frames adds a frame or a stamp to your picture. A frame or stamp cannot be removed once it has been used in a picture. The picture resolution may change while taking pictures with frames. The resolution returns to the original setting once Frames is disabled.

Note: The following settings will revert to the default setting each time you exit the camera application: Self Timer, Multishot and Color Tone.

Menu & Submenu Items

Browser	Messaging	Settings	BREW* Apps
Launches the Browser	New Text Message New Pic Message Voicemail Inbox Browser Alerts* Sent Messages Outbox Saved Messages Drafts Msg Settings Message Groups Erase Message	Bluetooth® Sounds Display Convenience Voice Features Accessories Network Security Phone Info*	Mobleshop Settings Help
Contacts	Recent Calls	Tools	Media Gallery
View All Add New Groups Speed Dial List Voice Dial List Erase Contacts Contacts Count	All Incoming Outgoing Missed Data Erase Call List Call Timer Kilobyte Counter	Voice Memo Scheduler Alarm Clock Tip Calculator Calculator Timer Stopwatch Memopad World Clock	Images Sounds Delete All

Camera

Launches the Camera

* The menu items on your phone can change depending on the services provided by your service provider. Check with your service provider.